


3

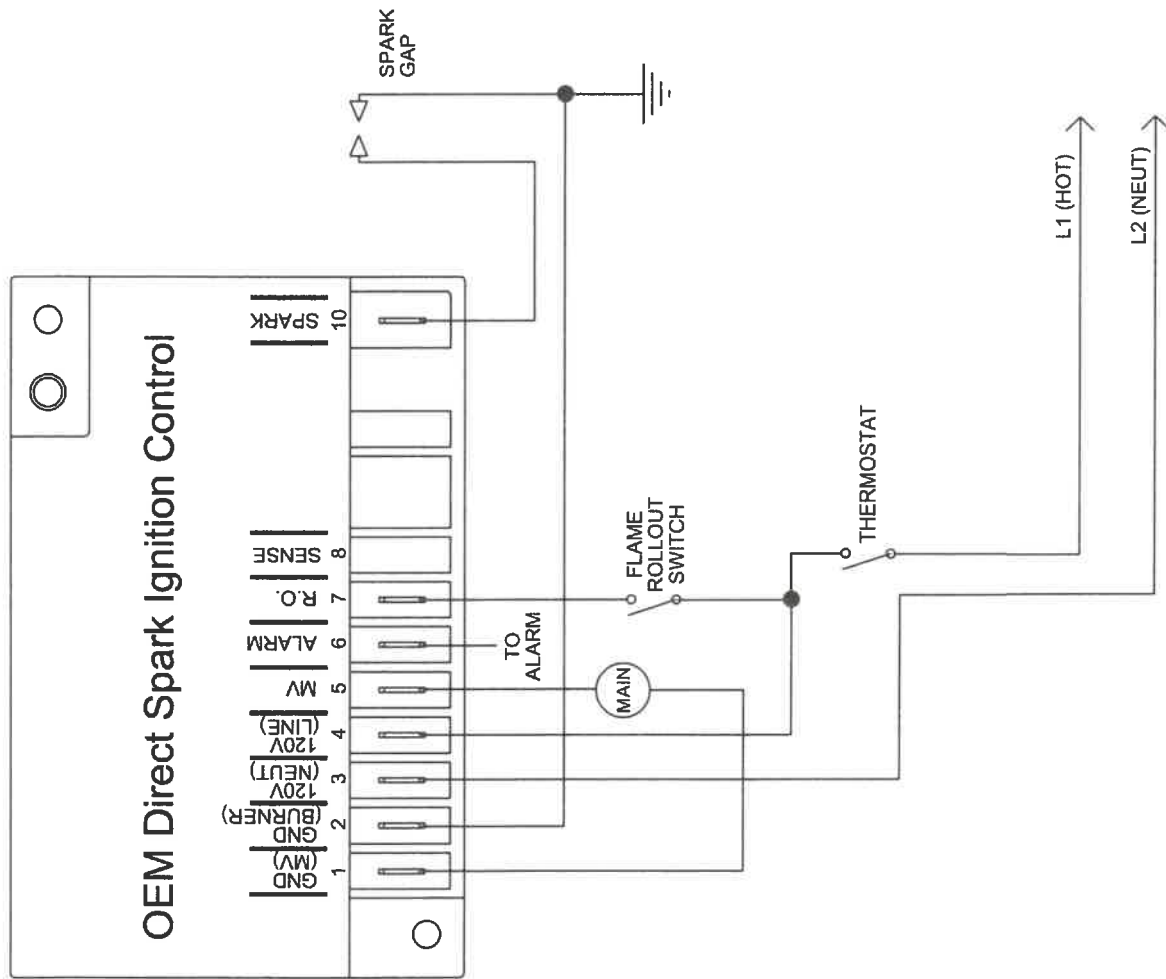

Note: no connection at R.O. terminal for non-rollout models
SENSE terminal not required for internal flame sense models
FIG.10 TYPICAL WIRING, HARDWARE TYPE 10,12,14,16,18,20,22,24