



Note: no connection at R.O. terminal for non-rollout models  
SENSE terminal not required for internal flame sense models

FIG.14 TYPICAL WIRING, HARDWARE TYPE 26,28